

READY. SET. VOTE!

1

You are about to vote on the OpenElect Voting Interface or OVI. If a polling official has not yet activated the terminal for you, please visit the registration desk to notify someone.


Display settings, such as brightness and contrast, can be changed by the voter by touching the "Settings" button at any time. To increase or decrease the magnification of the ballot, touch the "+" or "-" buttons as shown to the right.

To begin voting, press the "Start" button.

To vote, simply touch the name of the candidate for whom you choose to vote. A mark will appear indicating your vote.



2

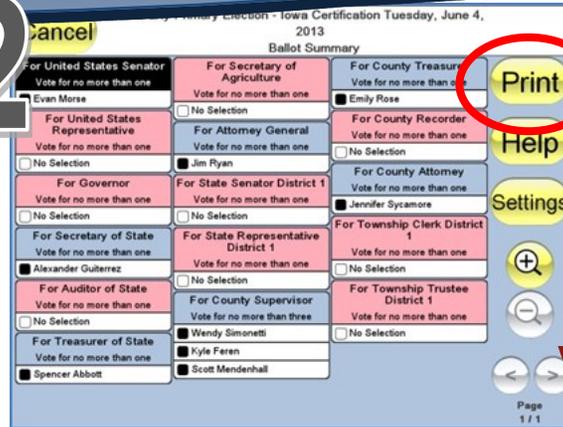


Once you have reached the end of the ballot, press the "Done" button. At that time, you will be presented with a summary of your marked ballot for review. If any of your choices are incorrect, simply touch the contest, change your vote and return to the summary screen. Once you have confirmed your selections, press the "Print" button in the top right corner of the screen. Your ballot will then print. Firmly pull your ballot towards you to remove it from the OVI.

3

Review your printed ballot (Printed during Step 2). If you notice an error on your printed ballot, simply notify a polling official to have your ballot spoiled and to vote a new ballot.

Once your ballot is correctly marked, place it into the ballot box or OVO Precinct Scanner.

NOTE: The scanner will take your ballot in any orientation.

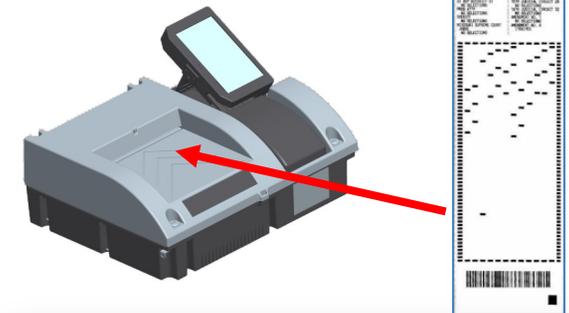

OVI-VC Voting Instructions



READY. SET. VOTE!

1

You are about to cast a ballot on the OVO in-precinct scanner. The voter should have been provided with an unmarked paper ballot at the registration desk.

To mark your ballot, completely fill in the box next to the name of the candidate for whom you wish to vote. Do not use an "X" or "V" to designate your selection. When marking your ballot, please use only the pen provided to you by the polling officials.

If you have specific questions about the ballot that was issued to you, notify a polling official for assistance.



2



Many ballots have two sides to them, especially in Primary and General Elections. Be sure that you vote both sides of your ballot.

Once you have marked your ballot, review it to ensure that you have made all of your desired selections.

3

Once your ballot is correctly marked, place it into the ballot box or OVO Precinct Scanner.

NOTE: The scanner will take your ballot in any orientation.



OVO Voting Instructions



READY. SET. VOTE!

1


You are about to vote on the OpenElect Voting Interface or OVI using the ADA keypad and headphones. If a polling official has not yet activated the terminal for you, please visit the registration desk.

The OVI keypad allows the voter to navigate the ballot by using the four directional keys which surround a square “Select” or “Enter” button. The voter can also adjust the volume as well as the tempo.



Listen to all instructions and then To begin voting, use the keypad to navigate to the start button on the screen and then press the square center button. Navigational instructions will be given as you move through the ballot.

2

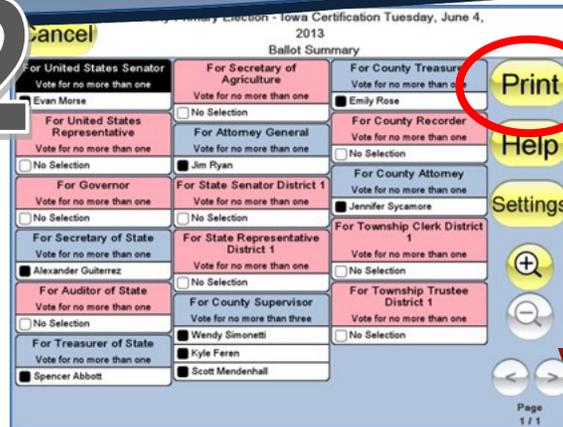


Once you have reached the end of the ballot, navigate to the “Done” button. At that time, a summary of your marked ballot will be read. If any of your choices are incorrect, simply change your vote and return to the summary screen. Once you have confirmed your selections, navigate to the “Print” button and press the square center button to print your ballot. Firmly pull your ballot towards you to remove it from the OVI.

3

Review your printed ballot (Printed during Step 2). If you notice an error on your printed ballot, simply notify a polling official to have your ballot spoiled and to vote a new ballot.

Once your ballot is correctly marked, place it into the ballot box or OVO Precinct Scanner.

NOTE: The scanner will take your ballot in any orientation.

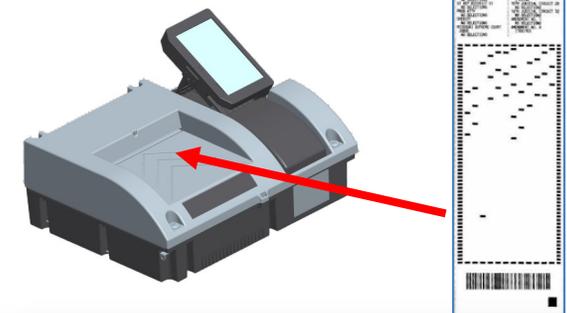

OVI ADA Voting Instructions

